


LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #500-GA

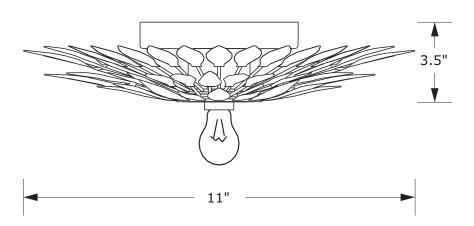



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate

Liectific Code and the appropriate

local electrical codes.





You will need 1 -Medium Bulb

60 Watts Recommended 100 Watts Max.
USE LED BULBS FOR EXTENDED USE
THIS FIXTURE IS DAMP RATED


How to install

- 1.Do a complete inventory of all parts and components before you start installation.
- 2. Raise the canopy onto the mounting plate, and secure it with the ball nuts.
- 3.Insert recommended bulb (not included).



PART NUMBER MODEL #500-GA

Outlet Box C -



Part Number

- A. (1) Mounting Hardware B. (1) Canopy(W4.5",H1") #XRE500GACAN4.5IN
- C. (2) Ball Nuts #XRE500GABANUT
- D. (1) Leaf Assembly
- E. (1) Socket Ring